

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Not suitable for gravity feed systems.
- * Body (1) is fitted with a flow regulated aerator insert. This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products. The flow regulator can be accessed as shown (Fig.1).
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Hob lining hole should be cut or finished as per the dimensions shown (Fig.2).
- 2) Place threaded tail of tap body into deck hole, slide washers (2) and tighten nut (3) on threaded tail until outlet is clamped firmly to the deck (Fig.3).

- 3) Install water inlet hose (not supplied) and check for leaks.
- 4) Ensure that the tap is oriented with the spout pointing downwards.

Inlet Connection:

½" BSP

IMPORTANT

Pressure & Temperature Requirements.

- Static inlet pressure range : 150 -1000 kPa
New Regulation : -500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Water temperature range: 5 - 80°C.

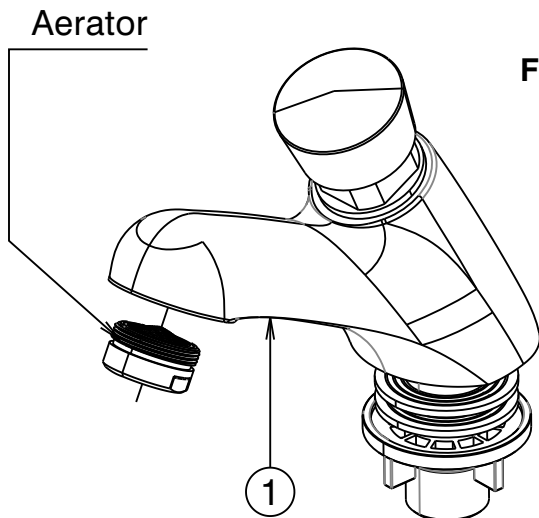 


Fig.1

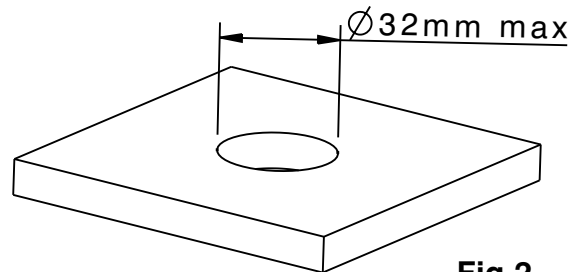 


Fig.2

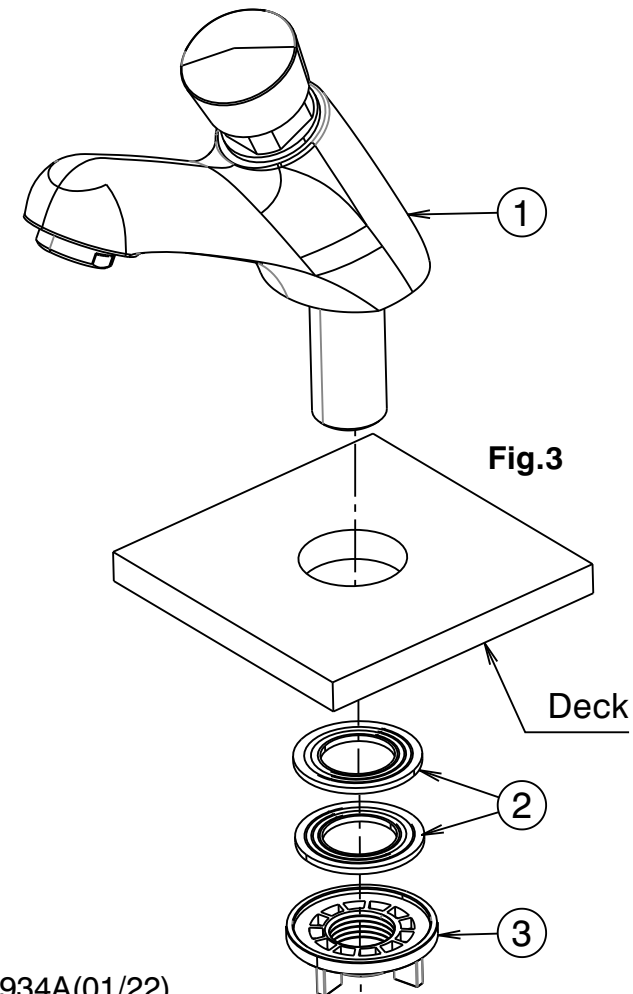 


Fig.3